


Parts List 10927TS

Part No.	Description	Qty.	Part No.	Description	Qty
Various	Shoe (See Rail & Shoe Data)	1 Pair	04733	Collar - Gas Drill	1
01320	Warning Tag	2	04734	Pin Positive Ejection Front	1
01432	Slide	1	04735	Pin Positive Ejection Back	1
01569	Coolant Shut Off Valve	1	04736	Seal Lip 9/16 x 3/8 x 3/32	1
01570	Quick Connect Fitting	1	04737	Retaining Ring	1
01592	Collant Bottle	1	04738	Roll Pin	1
01593	Hose Clamp	2	04740	Spring	1
01836	Round Locating Pin	2	04744	Faceplate	1
01837	Diamond Locating Pin	2	04748	Set Screw #12-24 x 3/16	1
02110	Front Support Bracket	1	04749	Arbor Assembly	1
02217	Set Screw #8-32 x 3/16	1	10563	Hex Jam Nut	5
02363	O - Ring	1	10563	Hex Jam Nut	5
02368	Screw 3/8 - 16	1	10568	Flat Washer	2
10623	Screw 3/8 -16 x 1/2	1	10570	Feed Handle Knob	3
02712	Spring Latch	1	10623	Set Screw	2
02713	Hinge	1	10649	Screw #10-32	3
02714	Panel Plate	1	10660	Screw 1/4 - 20	3
02820	Tie Cable	1	10662	Lock Nut #10 - 24	2
02997	Spacer	2	10841	Screw - SHC #10-24	2
02998	Spacer	2	10859	Jam Nut	2
02999	Engine bracket	1	10956	Brass Gib - Pair	1
03097	Brace	2	40077	Screw 1/4 - 20	1
03098	Skid Plate	1	40078	Screw 1/4-20 x 1-1/2	2
03107	Strap	1	40107	5/16 Helical Lock Washer	1
03161	Feed Handle	3	40110	Lock Washer 1/2	2
03177	Hub Assembly	1	40225	Steel Gib	1
03178	Gas Engine	1	40229	Feed Gear	1
03244A	Housing	1	40230	Rack 20 Pitch	1
03288	Gripper	2	40231	Bronze Bushing	2
03500	Machine Washer	2	40232	Roller Bearing	1
03501	Hitch Pin	2	40234	Thrust Washer	2
03502	Retaining Ring	6	40256	Set Screw 5/16 - 18	1
03512	Clamp Carry Arm	1	40296	Seal Neop.	1.5 FT
03513	Clamp Arm	2	40297	Screw #6 - 32	2
03514	Clamp Bracket	2	40300	O-Ring	2
03516	Base Plate	1	40301	Thrust Washer	2
03517	Clamp Round Bushing	1	40302	Retaining Ring	2
03518	Clamp Flat Bushing	1	40374	Hex Nut #6 -32	2
03519	Clamp Middle Pin	1	40390	Bolt 1/4 -20	3
03522	Clamp Turn Handle	1	40391	Lock Washer 3/8	3
03524	Clamp Short Pin	2	40398	Retaining Ring	1
03525	Clamp Lower Pin	1	40537	Coolant Inducer	1
03526	Clamp Carrying Handle	1	40538	Quick Connect Nipple	1
03528	Radiused Clamp Pad	2	40546	"O" Ring	1
03563	Hex Nut 5/16	1	41049	Set Screw	1
03564	Screw 1/2 - 13	2	50035	Lock washer	6
03575	Clamp Feef Screw Assy.	1	50037	Hex Nut	6
03630	Clamping Procedure Tag	1	90027	Flat washer	3
03662	Clamp Template Screw	1	90028	Lock Washer	8
03690	Bolt 1/2 -20	2	90052	Lock Washer	2
03857	Drive Screw	8	90055	Screw 1/4 20	4
04173	Sealant .001	1	90092	Carry Handle Grip	1
04349	Set Screw 1/4 - 28	5	90098	Screw -SHC #10 -24 x 3/4"	4
04390	Pin 3/16 x 3/4	1	90211	Screw #10 -24	4
04391	O-Ring	1	90376	Lock Washer	9
04457	Nut-Hex 1/4-28	1	01326	Screw SHC 1/4-28	1
04732	Arbor - Gas Drill	1			

Engine Parts Diagram

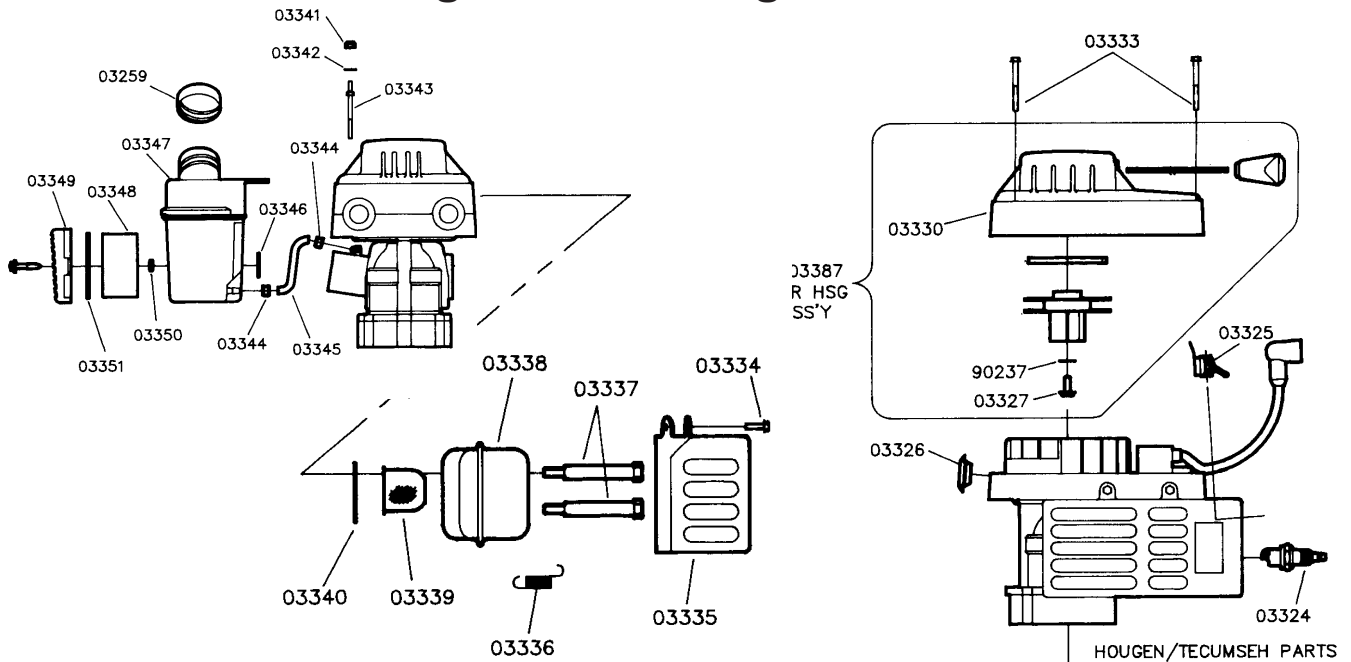

PART NO.	DESCRIPTION	NO. REQ'D.	PART NO.	DESCRIPTION	NO. REQ'D.
03259	Vented Fuel Cap	1	03336	Muffler Spring	1
03310	Clutch Driver	1	03337	3/8" Bolt	2
03311	Clutch Drum Assy.	1	03338	Muffler	1
03312	Ball Bearing	4	03339	Spark Arrestor	1
03313	Snap Ring	1	03340	Exhaust Gasket	1
03314	Gear Case, Upper	1	03341	Locknut	1
03315	Ball Bearing, Small	2	03342	Flat Washer	1
03316	Gear & Pinion	1	03343	#8 Stud	1
03317	Gear & Shaft	1	03344	Hose Clamp	2
03318	Gasket	1	03345	Fuel Line	1
03319	Gear Case, Lower	1	03346	Carburetor Seal	1
03320	Spacer	1	03347	Fuel tank	1
03321	Snap Ring	1	03348	Foam Filter	1
03322	Bolt	6	03349	Filter Cover	1
03323	Locknut	2	03350	#10 Nut	2
03324	Spark Plug	1	03351	Pre Filter	1
03325	Ignition Switch	1	03387	Blower Assy.	1
03326	Hole Plug	2	03895	Ignition	1
03327	Screw #10	1	03896	Carburetor	1
03333	Screw #8	2	90028	Lock washer	6
03334	Screw #8	2	90237	Flat Washer	1
03335	Muffler Guard	1			

